4 / 8CH H.264 STANDALONE DVR
VEDVR 2304B / VEDVR2308B

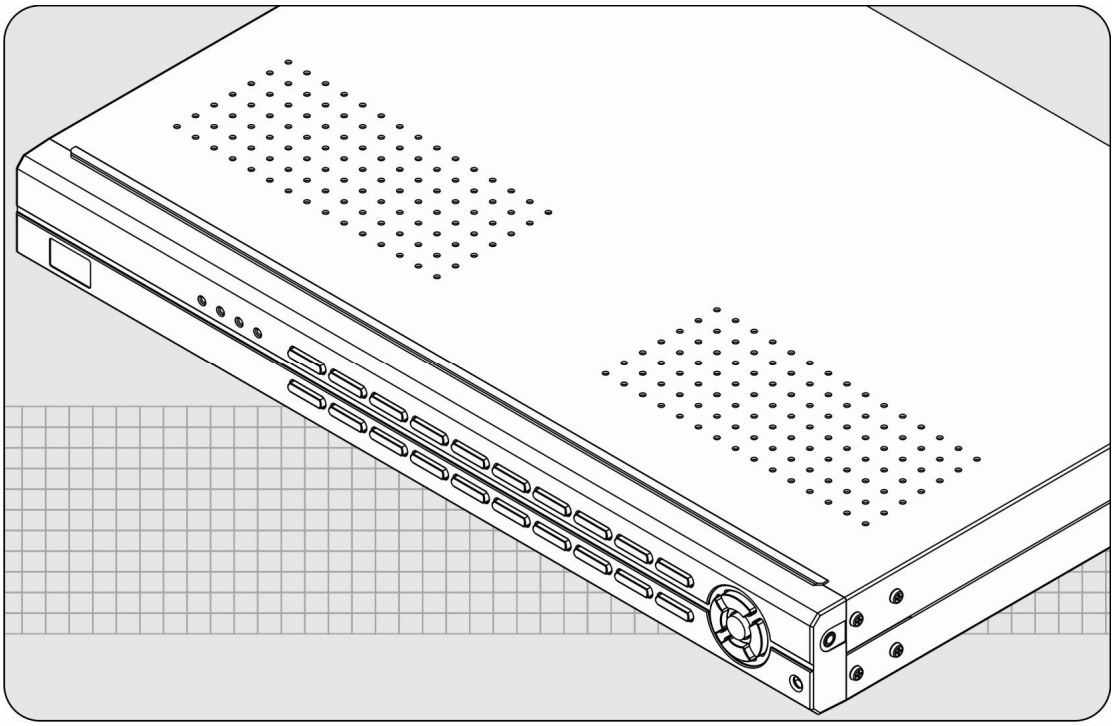

USER MANUAL

2011 April. V1.0

WARNING

- Do not expose the DVR under the sunlight, heat or wet environment while installation. As it could decrease the performance of DVR and damage the machine.
- Do not touch the power plug or case with wet hands as this could result electric shock.
- Do not forcedly bend or put heavy object on power cable as this could result in injury to personal or equipment.
- Do not operate with damaged power cord or loose electrical outlet as this could result in electric shock or accident.
- Please use individual power instead of share electrical outlets with other electrical equipment as this could result in damage or accident.
- Do not attempt to service this DVR by yourself as it may expose you to dangerous voltage or other hazards. Please refer all service to the qualified servicing distributor.
- Do not open the covers or insert any object into DVR.

CAUTION

- Do not place the machine on an uneven surface or it would decrease the DVR efficiency or malfunction.
- Avoid any shock or bumping of the DVR while recording. Improper handling could damage the system.

CAUTION

Make sure the voltage selector switch (115V/230V) is set to appropriate setting before plug in!

CONTENTS

1. Specification 1
2. Front Panel 2
3. Installation 3
4. DVR Installation 3
5. System Operation 4
6. Display Setup 6
7. Search 8
8. Main Menu 10
   - 8.1 Camera Setup 11
   - 8.2 Record Setup 13
   - 8.3 Alarm Setup 14
   - 8.4 Motion Detection 14
   - 8.5 Network Setup 15
   - 8.6 Log Search 17
   - 8.7 Backup 18
   - 8.8 System 19
     - 8.8.1 Time Setting 19
     - 8.8.2 HDD Setup 20
     - 8.8.3 Display Setting 21
     - 8.8.4 System Information 22
     - 8.8.5 User password 22
     - 8.8.6 System Language 23
     - 8.8.7 Audio setting 23
     - 8.8.8 System Maintenance 23
9. Cell Phone Monitoring Operation 24
10. H264Player Operation 27
11. Web Operation 29
12. Default Setting 37
13. USB Flash Memory Stick Support List 38

1. Specification

Video Format		NTSC	PAL
Video Input		4 / 8 CH Input / BNC	
Audio Input		4 CH Input / RCA	
Video Output		1CH Output / BNC	
Audio Output		1CH Output / RCA	
XGA Output		800x600, 1024x768, 1280x1024, 1440x900	
Alarm Input		4CH Alarm In	
Alarm Output		Buzzer，1 x Relay Out (N.O、N.C)	
Display Mode		Full Screen, 4/8CH Split Screen, Auto Switch, Picture in Picture	
Display Resolution		720 x 480	720 x 576
Recording Resolution	Highest	720 x 480	720 x 576
	High	720 x 240	720 x 288
	Normal	360 x 240	360 x 288
Recording Frame		Max. 120 / 240 FPS	Max. 100 / 200 FPS
Compression Algorithm		H.264	
Operating System		Embedded Linux	
Pentaplex		Live / Record / Playback / Network / Mobile Phone	
Recording Mode		Manual, Schedule, Event	
Schedule Recording		Full Recording, Motion, Alarm, Manual Recording	
Status Indicator		Power, Network, HDD1, HDD2	
Event Mode		Alarm Trigger, Motion Trigger, Video Loss	
		Recording Duration: 10~60 sec.	
Playback Mode		Normal Speed: x1	
		Fast Forward: x2 / x4 / x8 / x16 /x32multiple speed	
		Slow Forward: 1/2, 1/4, 1/8 multiple speed	
		Fast Rewind: x2 / x4 / x8 / x16 /x32	
		Frame by Frame Playback: Forward	
		Search Function: Time / Event	
Network Protocol		TCP/IP / PPPoE / DHCP / SMTP / DDNS	
HDD Type		SATA 3.5”HDD x 2 (No HDD Included)	
HDD Management		Automatic Format System	
PTZ Control		Communication Protocol (PELCO P, PELCO D, MIKAMI)	
Backup Device		USB 2.0 Flash Memory Stick	
Firmware Update		Host USB	
Multi-Language		English / Chinese / Others	
Control Mode		Front Panel / Remote Control / USB Mouse / Internet	
Network Control		IE Browser	
Network Function		Live Display / Playback / PTZ Control / System Setup	
IR Extension		YES (Optional)	
Power Supply		DC 12V / 4.16A(AC100V~240V 50/60HZ)	
Unit Dimension		430mm (W) x 314mm (D)x 53mm (H)	
Weight		2.83kg (HDD and Power Adapter Not Included)	
Operating Temperature		0℃ ~ 46℃	

2. Front Panel

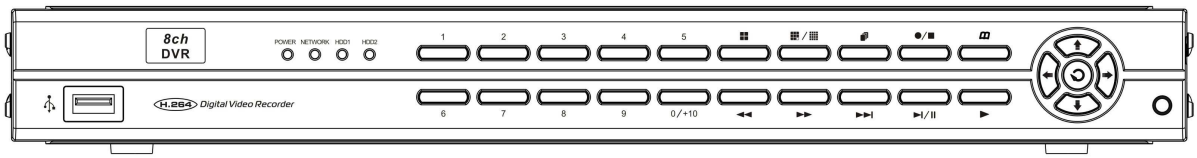

	MENU	Under the live viewing mode, press MENU to enter the main menu. Under the menu mode, press MENU to go to the upper menu.
●/■	Stop Manual Record	Under the playback mode, press the STOP button to stop the operation or go to the upper menu. Press the Manual Record button to start recording under the live mode.
▶|/ II	Pause Step Forward	Under the playback mode, press the Pause button to pause the playback. Under the pause mode during the playback, press the button to playback frame by frame in each time.
▶	Play	Under the live viewing mode, press the Play button to enter the playback mode.
◀◀	Fast Rewind	Rewind speed: x2 / x4 / x8 / x16 / x32
▶▶	Fast Forward	Forward speed: x2 / x4 / x8 / x16 / x32
▶▶|	Slow Forward	Slow Forward speed: 1/2, 1/4, 1/8
	Up Down	To move up or down of the selection setting in the menu.
	Left Right	To move left or right of the selection setting in the menu.
	Enter	Press the Enter button to confirm the setup or go into sub-menu.
	USB 2.0 Port	USB backup or firmware update. (There are a front and a back USB that can be used one at a time.)
POWER	Power Indicator LED	The LED will light on when power on
NETWORK	Network Indicator LED	The LED will light on when network connected.
HDD1	HDD 1 Indicator LED	The LED will light on when the HDD 1 is written.
HDD2	HDD 2 Indicator LED	The LED will light on when the HDD 2 is written.
1~8	Channel 1~8	Under the live viewing mode or playback mode, 1~8 Channel display.
/	8CH Split	8 channel split screen display.
	Quad	Quad screen display.
	Auto Switching	Under the live viewing mode, press the button to start/stop the auto switching function.

3. Installation

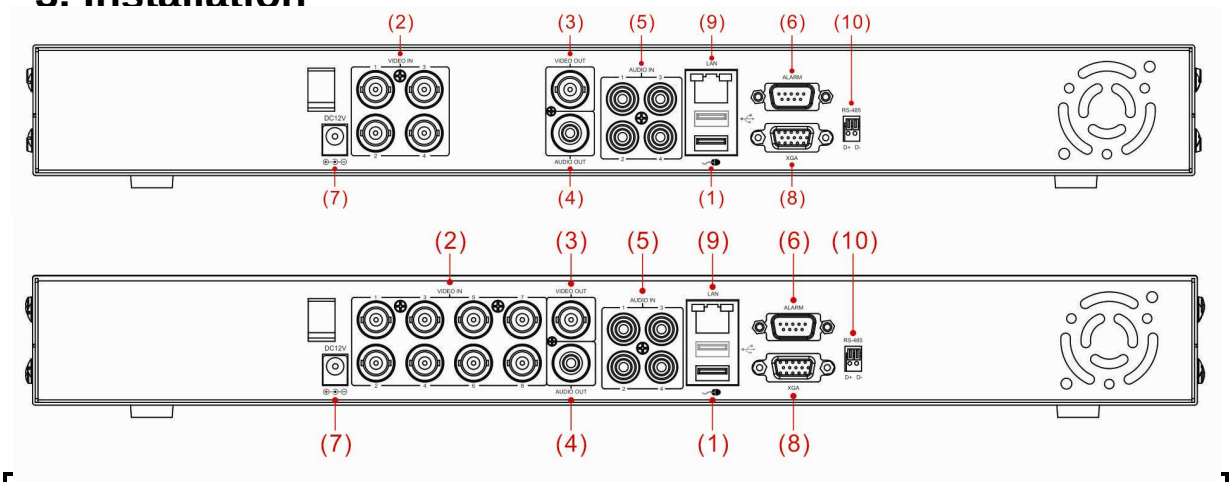

1	USB Mouse Port	2.0 USB Mouse
2	Video In	8CH Video Input (BNC)
3	Video Out	1CH Video Output (BNC)
4	Audio Out	1CH Audio Output (RCA)
5	Audio In	4CH Audio Input
6	Alarm	Alarm I/O
7	DC12V	Power Input
8	XGA	PC Monitor Output
9	LAN	RJ-45 Network Connection
10	RS-485	For Speed Dome Use

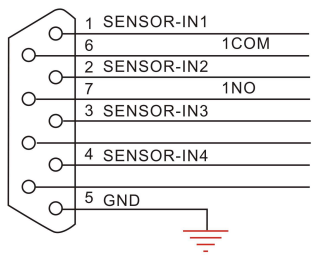

Item
Point 1: CH1 sensor input.
Point 2: CH2 sensor input.
Point 3: CH3 sensor input.
Point 4: CH4 sensor input.
Point 5: ground.
Point 6: the first relay joint port.
Point 7: the first relay normal open.

4. DVR Installation

- Connect the camera video output to the DVR video input port with BNC connectors.
  The camera install coaxial cable is suggested cat 6 or above.
- DVR Network installation
  Please connect DVR to HUB or router by using RJ-45 network cable and make sure the DVR network indicator LED is on.
  (Please refer to Network Setup for further network setting information of using static IP, PPPoE or DHCP.

- Alarm Installation
  Please refer to Installation for external alarm I/O installation. Please refer to Alarm Setup.
- Speed Dome Installation
  This device can support 3 kinds of communication protocol (Pelco D, Pelco P & MIKAMI)
- Power Installation
  Please use the provided power cable and adaptor to connect the DVR (AC100V~AC230V). Please refer to Installation for connecting position. The DVR system will enter into live viewing mode when power is connected. Please refer to Display Setup - Live Viewing Mode for more information.

5. System Operation

There are 3 kinds of DVR control method: front panel, remote control and USB mouse.

- USB Mouse Operation
  1. Quick Menu: Right click the mouse button under the live viewing mode to go for enter into Quick Menu.
  2. Left click the mouse button under the main menu to go to the sub-select menu.
  3. Left click the mouse button under the select menu to go to the sub-menu.
  4. Use the mouse to change the setting.
  5. Please refer to Display Setup - PTZ Setup.
- Remote Control Operation
  Remote Control and front panel operation are the same; please refer to Front Panel and the reference table of the button as below.

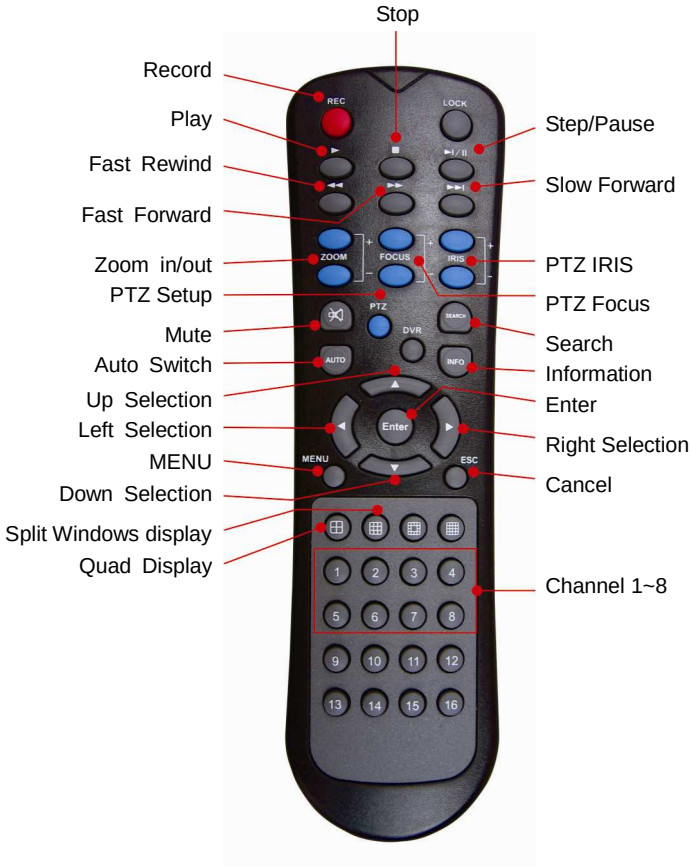

■ Virtual Keyboard Operation

The text input of the virtual keyboard is as below:

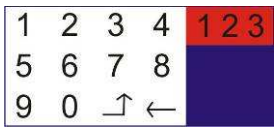

Menu Operation	Front Panel & Remote Control Operation	Mouse Operation
Select character from virtual keyboard	[Up/Down/Left/Right]	[Move Cursor]
Keyin the select character	[Enter]	[Left Click]
Exit the virtual keyboard	[MENU]	[Left Click]out of selection area

Key Description of Virtual Keyboard	
←	Delete the previous character
123	Switch to text input
↵	Enter key. Save and exit the virtual keyboard
Other Keys	Character Keyin

■ Main Menu Operation

Setup Operation	Front Panel & Remote Control	USB Mouse
Select	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Menu	[Enter]	[Left Click]
Return to Upper Menu	[MENU]	[Exit]

■ Setup Operation

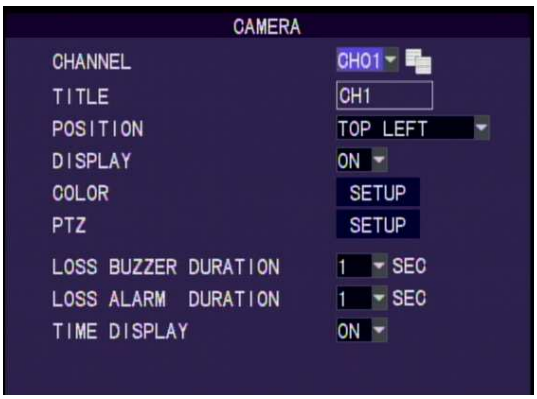

Setup Operation	Front Panel & Remote Control	USB Mouse
Select	[Up/Down/Left/Right]	[Moving Cursor]
Confirm Select Setting	[Enter]	[Left Click]
Change the Select Setting	[Left/Right]	[Left Click]
Return to Upper Menu	[MENU]	Right Click

6. Display Setup

There are 3 kinds of screen display mode: Live, Auto Switching and PTZ. DVR.

- Live Viewing Mode

  The DVR will go to the live viewing mode after boot up. There are 5 different status icon:

  ●: Record
  M: Motion Triggered
  L: Video Loss
  A: Alarm Triggered
  : Sound on/off

Setup Operation	Front Panel&Remote Control	USB Mouse
Channel 1~8 Single Channel Display	[CH1~8]	Select one of channel [Double click left button]
8 Channel Split Display	[8 CH Split]	Under single channel [Double click left button]
Quick Menu	[MENU]	[Right]
Playback Mode	[Play]	[Right] QuickMenu
Start/Stop the Manual Record	[Record]	[Right] QuickMenu
Start/Stop the Auto Switching	Front Panel [Auto Switch] Remote Control [Auto Switch]	[Right] QuickMenu
Start/Stop Mute	Remote Control [Mute]	[Left] Left Click

■ Quick Menu

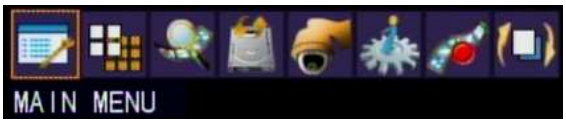

Setup Operation	Front Panel & Remote Control	USB Mouse
Select Item	[Left/Right]	[Moving Cursor]
Enter the Select Item	[Up/Down]	[Moving Cursor]
Confirm the Select Item	[Enter]	[Left Click]
Exit	[MENU]	[Left Click] out of selection area

■ PTZ

Please set the speed dome properly before control PTZ. Please refer to PTZ Setup.

Setup Operation	Front Panel & Remote Control	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Zoom +,-		
Focus, +-		
Iris, +-		
Adjust Movement Speed		
PTZ Upward		
PTZ downward		
PTZ Left		
PTZ Right		
Start/Stop Auto Tracking		
Exit	[MENU]	Right Click

■ Playback Operation

Setup Operation	Front Panel & Remote Control	USB Mouse
Fast Rewind	[Fast Rewind]	◂◂
Fast Forward	[Fast Forward]	▸▸
Step Forward	[StepForward]	▸▸|
Step/Pause	[Step/Pause]	|▸
Play 1x	[Play]	▸
Stop	[Stop]	■
Digital Zoon		Drag by Left Click Z^+
1~8Single Channel Display	[1~8 Channel]	Select Channel [Double left click]
8split Display	[8split]	Under single channel [Double left click]

■ Auto Switching

1. Auto switch starts from order CH1~CH8, 8 split channel.
2. Press the button again to stop the function.

7. Search

In Live mode, use Play button in the front panel/remote controller or right clicking the mouse to switch to the Search function.

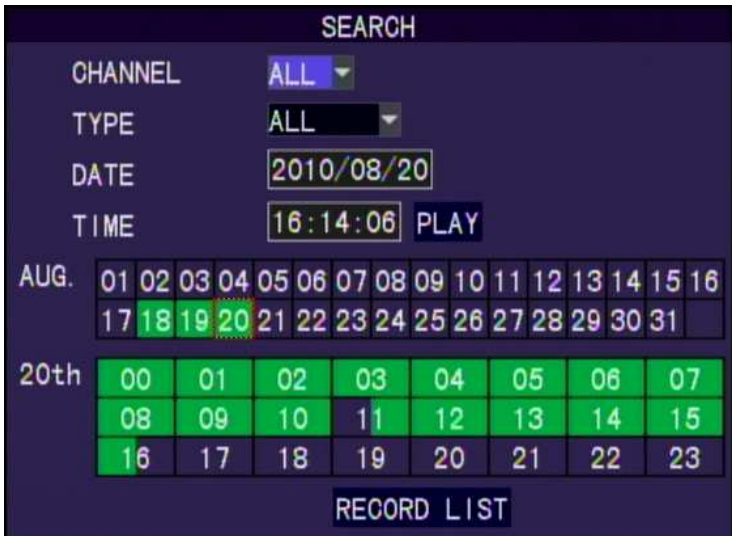

Setup Operation	Front Panel & Remote Controller	USB Mouse
Search	[Enter]	[Left Click]
Select Channel	[Up/Down]	[Moving Cursor]
Select Dates	[Up/Down/Left/Right]	[Moving Cursor]
Playback	[Enter]	[Left Click]
Return to Upper Menu	[MENU]	[Right Click

- No data: no color, data of alarm trigger: red color, normal record data: green color.
- Select the first half of hour frame under the date, the playback will start from 00 mins: 00 sec. Select the second half of hour frame under the date, the playback will start from 30mins:00sec. If there is no data on the date, please try to search from record list.
- Select any of 8 channels to playback.

- Record List

Setup Operation	Front & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Return to Upper Menu	[MENU]	[Left Click]
First Page		
Previous Page		
Next Page		
Last Page		
Mark all the events in this page		
BackUp		

- List all of recording data and click on one of record data to playback.
- Backup
  Please click “BACKUP” to backup the selecting file to USB memory stick.

8. Main Menu

Setup Operation	Front Panel & Remote Controller	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Exit Main Menu	[MENU]	[Right Click]

8.1 Camera Setup

- Channel
  Select one channel to set. Use CopyButton to copy present settings to other channels.
- Camera Title
  Set the title of camera. Key in by using virtual keyboard.
- Title Position
  Set the title position. Set: Top Left, Top Right, Bottom Left, Bottom Right and Off.
- Display
  Display the channel, set: On/Off
- Camera Color Setup

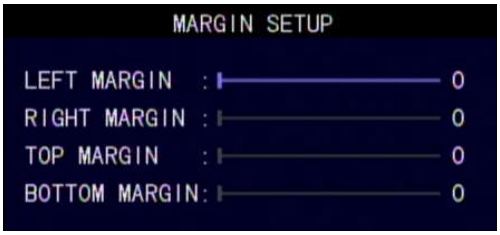

  - Hue: 0~50
  - Brightness: 0~50
  - Contrast: 0~50
  - Saturation: 0~50

- PTZ Setting

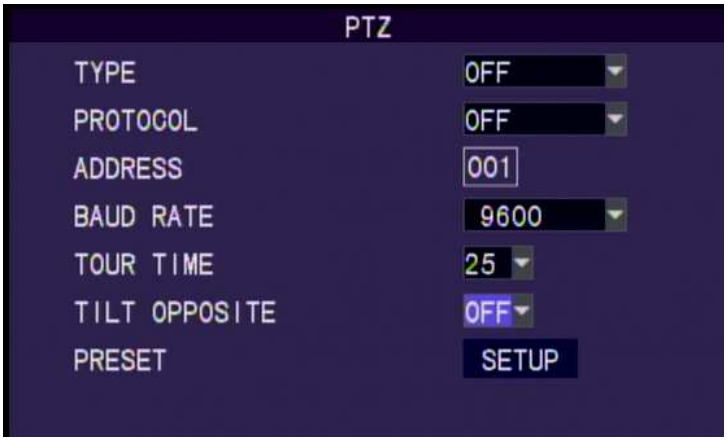

- Type
  Speed dome model type. Set: PTC-301, PTC-203ST, FUM 626, JG_QG988, FUM 622SD, FUM 628 or off. Please select the correct communication protocol if you enable this setting.
- Protocol
  Speed dome protocol. Set: PELCO P, PELCO D, MIKAMI or off.
- Address
  Speed dome address. Set: 0~255
- Baud Rate
  Speed dome baud rate. Set: 1200, 2400, 4800, 9600, 19200.
- Tour Time
  Speed dome tour time. Set: 5, 10, 15, 20, 25 sec or off.
- Tilt Opposite
  Set speed dome image upside down. Set: On/Off
- Preset

Setup Operation	Front Panel & Remote Controller	USB Mouse
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Enter Select Item	[Enter]	[Left Click]
Zoom +,-		
Focus +,-		
Iris +,-		
Adjust Move Speed		
Set PTZ Upward		
Set PTZ Downward		
Set PTZ Leftward		
Set PTZ Rightward		
Number Preset Setting		
Save Preset Setting		
Clear Preset Setting		
Clear All Preset Setting		
Return to Upper Menu	[MENU]	[Right Click]

- Buzzer Duration
  The buzzer ON duration when video loss.
- Alarm Relay Duration
  The Relay ON duration when video loss.
- Time Display
  Display the time in LIVE mode. Values: ON/OFF.

8.2 Record Setup

- Channel Switch
  On/Off the channel.
- Resolution
  NTSC Recording Resolution : 720x480, 720x240, 360x240.
  PAL Recording Resolution: 720x576, 720x288, 360x288.
- Frame Rate
  Setting of Frame Rate: NTSC: 0-30 frames/sec; PAL: 0-25 frames/sec.
- Quality
  Setting of recording quality: Values 1-5. The bigger valve, the better quality.
- Prerecord setting
  Prerecording time when motion alarm. Values: 0-10 seconds.
- Audio
  On/Off the sound effects.
- Encoding
  Encoding of channel. Values: VBR or CBR.
- Record schedule setup
  Always and Schedule Record.
  - Record Schedule

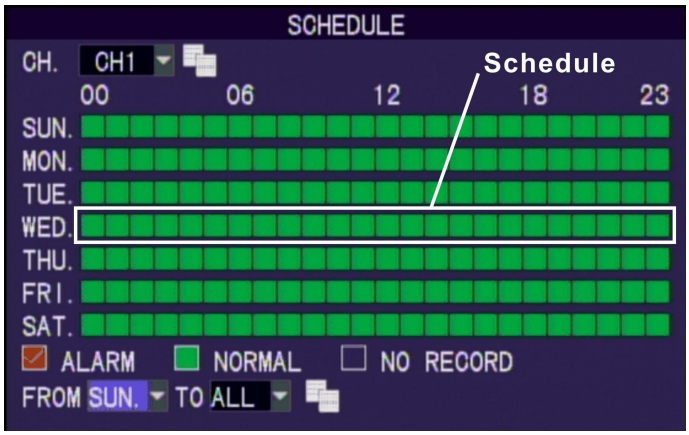

Setup Operation	Front Panel & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Channel	[Up/Down]	[Moving mouse wheel]
Select Time&Date	[Up/Down/Left/Right]	[Click/Drag-draw]
Return to Upper Menu	[MENU]	[Right Click]

◆ Copy

(1) Select source (2) Select target (3) Press COPY icon to copy.

8.3 Alarm Setup

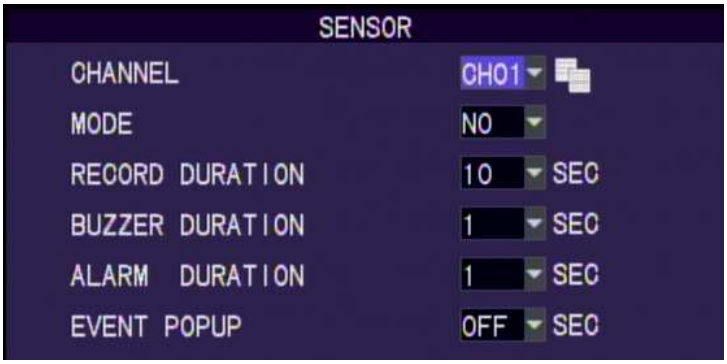

- Channel
  Select the channel to set. COPY icon can copy the present setting to other channels.
- Mode
  Enable/disable alarm trigger. Set: On/Off.
- Post REC
  The duration of the recording after triggered: 10, 20,…, 60 sec. or off.
- Buzzer Duration
  The duration of the buzzer beeping after being triggered: 1~30 sec or off.
- Alarm Duration
  Alarm out after alarm triggered: 1~30 sec or off.
- Event Display Duration
  The Duration of single channel display after being triggered: 1~30 sec or off.

8.4 Motion Detection

- Motion Detection
  Select the channel to set. COPY icon can copy the present setting to other channels.
- Channel Status
  Enable/disable motion detection for each camera. Set: On/Off
- Sensitivity
  Sensitivity level of motion detection. Set: 1~10. Higher value equal more sensitive.
- Motion Area Setup
  Setup by each small square.

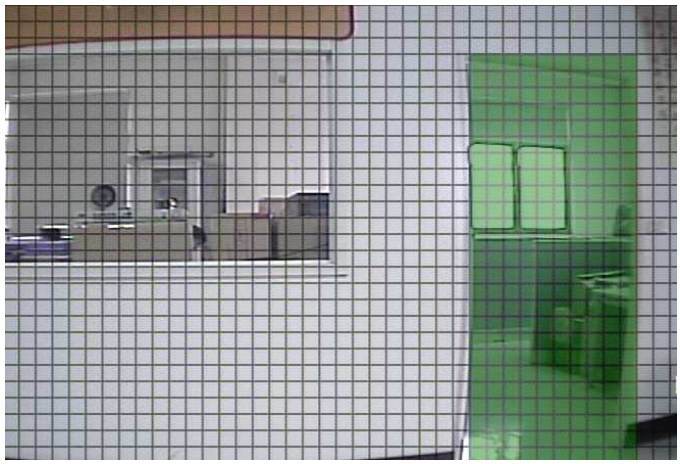

Setup Operation	Front Panel & Remote Controller	USB Mouse
Area Selection	[Up/Down/Left/Right]	[Moving Cursor]
Set Detection Area: must set on none detection area(Transparent Area)	(1)Move to the area (2)Press Enter to set the area	[Drag by Left Click]
Clear Detection Area: clear the set detection area: must set on detection area(Green Area)	(1)Move to the area (2)Press Enter to set the area	[Drag by Left Click]
Return to Upper Menu	[MENU]	[Right Click]

8.5 Network Setup

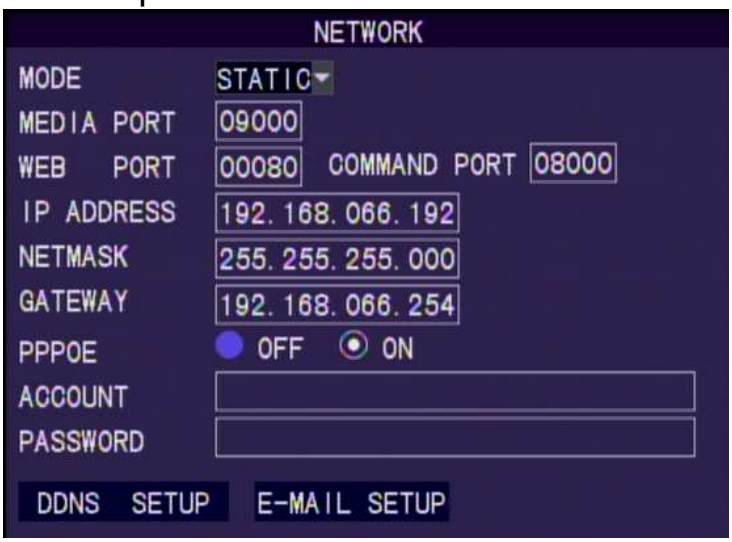

- Mode
  Set the connection method. Set: Static IP, DHCP, PPPoE.
- Media port
  Port used for stream media. Default is port 9000.
- Webport
  Port used for web access. Default is port 80.
- Command Port
  Port used for settings. Default is port 8000.
- IP Address
  Assigned IP address.
- Net mask
  Assigned net mask
- Gateway
  Assigned gateway
- PPPOE
  Need account and password for PPPoE.
- DDNS setting

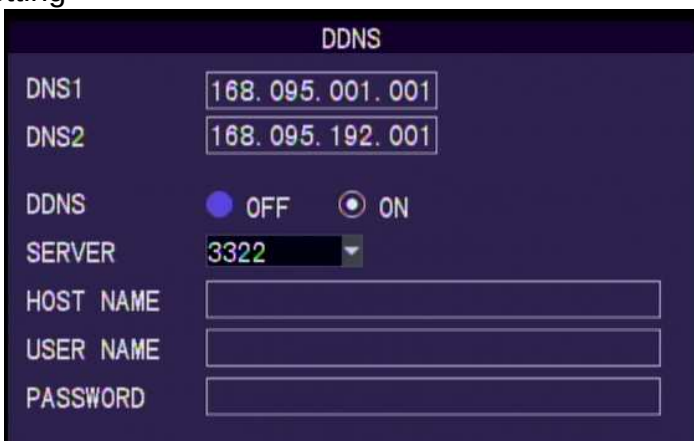

  - DNS1 First Domain Name Server，Default : 168.95.1.1
  - DNS2 Second Domain Name Server, Default :168.95.192.1
  - DDNS
    Enable/disable Dynamic Domain Name server. Values: On, Off.
  - DDNS Server
    DDNS Server, Values: 3322, dyndns, cctvdvr.
    When using DDNSserver, server name and account/password are required.
- E-Mail Setting

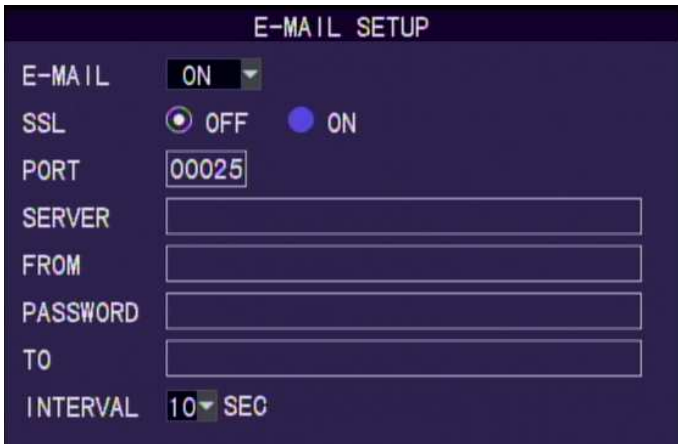

- E-MAIL
  Forward E-mail after alarm triggered. Enable: On/Off
- SSL
  Enable the SSL encryption. Recommend to set on if it is using gmail.
- SMTP port
  SMTP port number key in. For example, gmail port 465.
- SMTP Server
  SMTP server key in. For example, gmail : smtp.gmail.com
- From
  Sender E-mail address key in. For example,
  gmail: mail1@gmail.com
- Password
  Sender E-mail account password
- To
  Receiver E-mail address key in. For example,
  gmail: mail2@gmail.com
- Delivery span
  When alarm keeps going, the time span to send E-mail. Values: 10, 30, 60 seconds.

8.6 Log Search

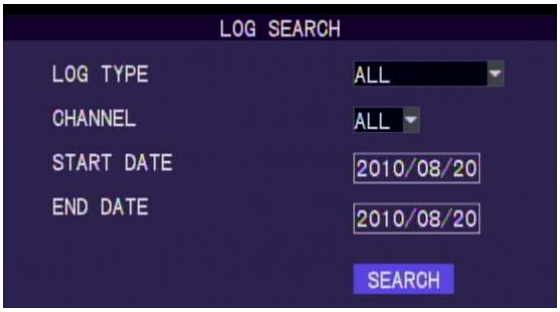

- Log type
  Set conditions for searching: type and time range. Log type can be ALL, Alarm, Operation, Motion Detection, Video Loss.
- Channel
  Select Channel 1-8 or all for searching.
- Start/End time
  Set the search range (Year/Month/Day).Press START to search.

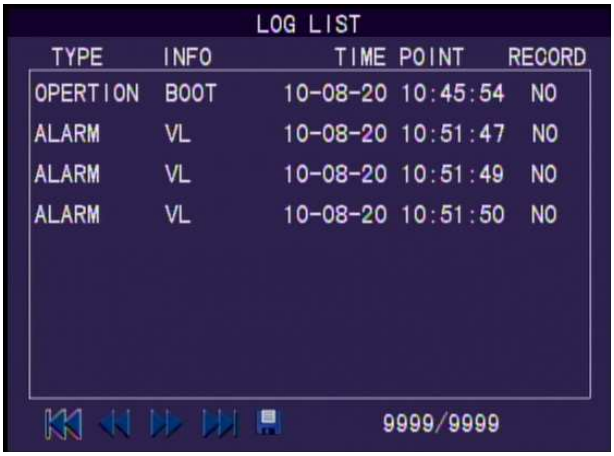
LOG LIST
TYPE INFO TIME POINT RECORD
OPERTION BOOT 10-08-20 10:45:54 NO
ALARM VL 10-08-20 10:51:47 NO
ALARM VL 10-08-20 10:51:49 NO
ALARM VL 10-08-20 10:51:50 NO
9999/9999

Setup Operation	Front & Remote Controller	USB Mouse
Enter Select Item	[Enter]	[Left Click]
Select Item	[Up/Down/Left/Right]	[Moving Cursor]
Return to Upper Menu	[MENU]	[Right Click]
First Page		
Previous Page		
Next Page		
Last Page		
Backup to USB disk		

★ When Trigger Recording is marked , Click to playback.

8.7 Backup

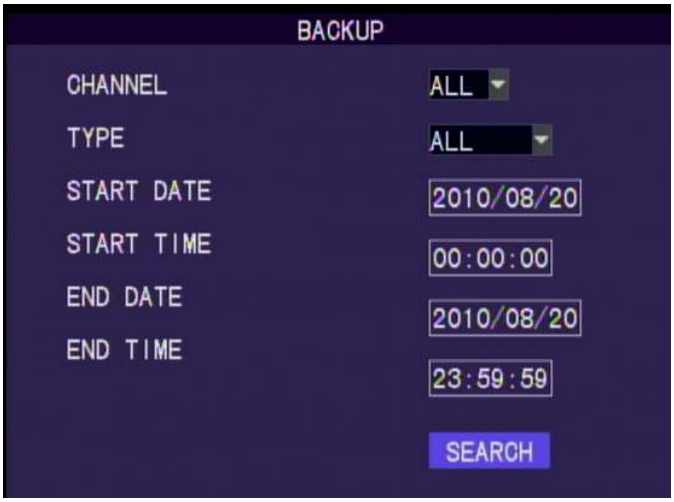

- Channel
  Backup all channels or single channel 1-8.
- Record Type
  Select all, normal or alarm.
- Start/End time
  Select the backup range of time. Press Search to start searching. The record list will be shown if available and follow [Record list] to backup.

8.8 System

8.8.1 Time Setting

- Date/Time
  Select by using virtual keyboard.
- Date Format Setup
  Set: YY/MM/DD, MM/DD/YY.
- Time Format Setup
  Set: 24Hours, 12Hours.
- Time Zone Setup
  Time Zone setting of DVR.
- NTP Setting (Network Time Protocol)

NTP: On or Off
Schedule Time: Using virtual keyboard
NTP server: Using virtual keyboard

8.8.2 HDD Setup

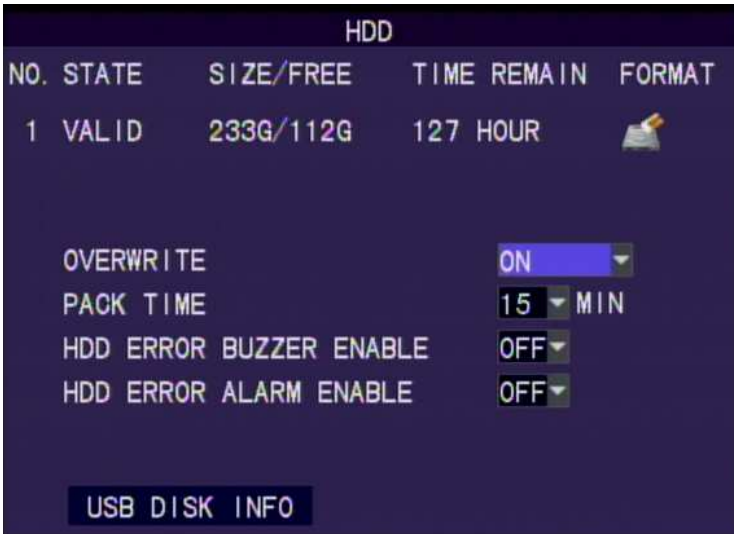

- Format
  Format the selected HDD
  Format HDD

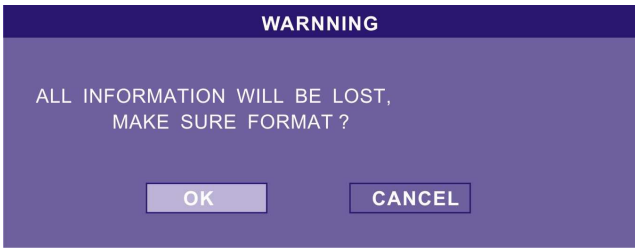

- Overwrite
  Enable/Disable Overwrite, Values: On/Off.
  If Overwrite is enabled, the period can be set as 6, 12, 24, 36, 48 hours and 7, 15, 30, 60 days.
- Pack Time
  Set the required packing time frame to allow the system to pack each saving file under continue recording mode. Pack time setting: 5 min, 10min, 15min, 20min, 30min, and 60min.
- Buzzer for HDD
  When the hard drive does not have enough space or something wrong, set the buzzer on. Values: On/Off.
- Alarm for HDD
  When the hard drive does not have enough space or something wrong, trigger the alarm. Values: On/Off.
- USB Disk Info

Format USB Memory Stick

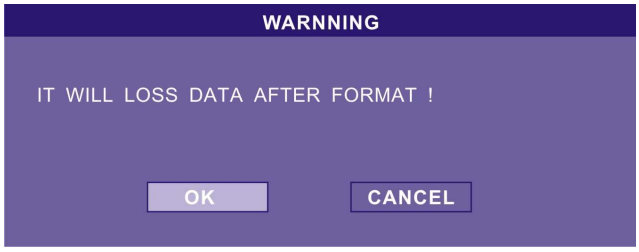

8.8.3 Display Setting

- GUI Display
  GUI display mode can be VIDEO or VGA.
- Video Switching Time
  Set the switching time when switching channels in video mode.
  Values: 1-99 seconds. (0 sec is Off)
- VGA Switching Time
  Set the switching time when switching channels in VGA mode.
  Values: 1-99 seconds. (0 sec is Off)
- Switching Sequence
  Set the switching sequence of channels.

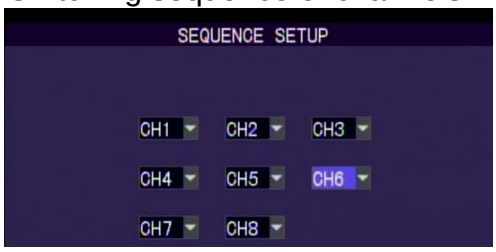

- Video Margin
  Set the display margins of the screen. They are Left, Right, Top and Bottom with range between 0 - 36.

- XGA Resolution
  XGA Resolution: 800x600, 1024x768, 1280x1024, 1440x900.

8.8.4 System Information

Provide the firmware version, MAC address, HDD status….

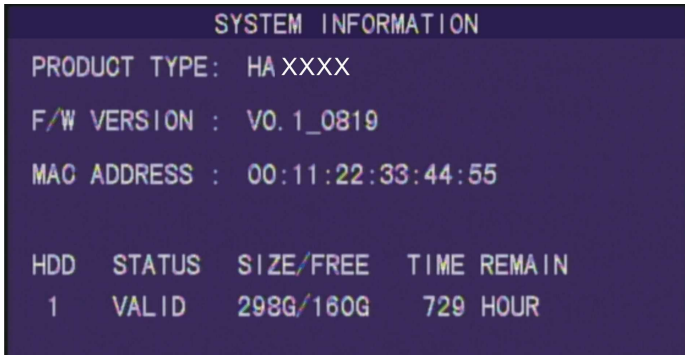
SYSTEM INFORMATION
PRODUCT TYPE: HA XXXX
F/W VERSION : V0.1_0819
MAC ADDRESS : 00:11:22:33:44:55
HDD STATUS SIZE/FREE TIME REMAIN
1 VALID 298G/160G 729 HOUR

8.8.5 User password

- Password Setup
  Enable/Disable password checking. Values: On/Off (Default)
  Administrator account/password can not be blank. And at least 4 characters for the password.
- Administrator account/password
  Administrator account allows user to access all of functions.
- User account/password
  Access rights can be assigned by setting.

8.8.6 System Language

- Language
  Values: Traditional Chinese, Simplified Chinese and English. Auto rebooting after change.
- Function Tip
  Show function tips below the menu items.
  Value: On/Off (Default).

8.8.7 Audio setting

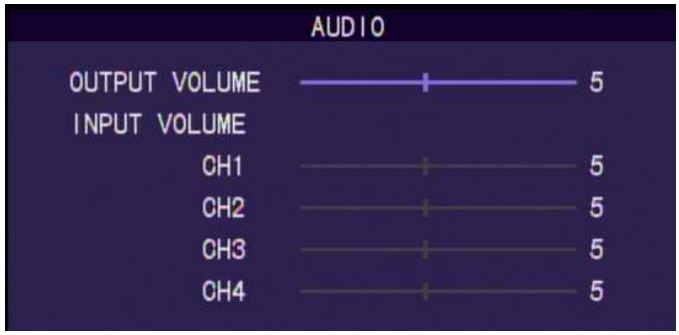

- Audio Volume
  Set the volume of audio In/Out. Values: 1-10. (Default: 5)

8.8.8 System Maintenance

- Auto maintenance: Set time for auto rebooting. Value: On/Off.

  Auto Rebooting setting

- F/W update
  Please plug the USB memory stick into the USB port on the DVR rear panel after download the new firmware to the USB memory stick.
  Note: the firmware only can be upgraded by using the USB port. Please don't operate the system, remove the USB memory stick or remove the power while it is in upgrade progressing in order to prevent any serious system error. The system will automatic reboot after upgrade.
- Load Setup Default
  Load factory default. Refer to [Default Setting].
- Reboot the DVR
  Reboot the DVR.
- ShutDown
  System will close the recording file. Please remove the power line manually.

9. Cell Phone Monitoring Operation

■ JAVA Script surveillance:

1. The mobile Phone must support JAVA Script
2. To download the JAVA software: open Internet Browser on the mobile phone, and enter the IP address of the DVR and add /viewer.jar at the end. Example: http://xx.xxx.xxx/viewer.jar.
3. Execute the application

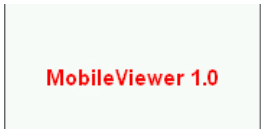

4. Click on "Add" on the drop down menu to add an IP address.

5. Enter the IP address, user name and the password of the DVR and click on "Save"

6. Enter the correct IP address and click on “Open”

7. Click on “Connect” to connect to the DVR.

8. Connecting

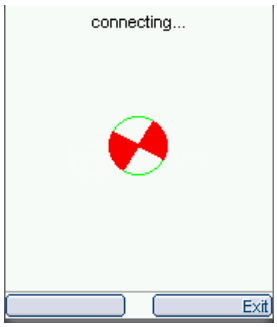

9. Connected

Menu	Capture
	Channel[1~8]

10. If fail to connect, please repeat steps 7 to 9.

■ Android mobile surveillance:

1. The mobile phone must support Android 2.1 (Test mobile: Motorola XT701).
2. Open Internet Explorer on the mobile phone.

3. Enter the IP Address of DVR.

4. Connected.

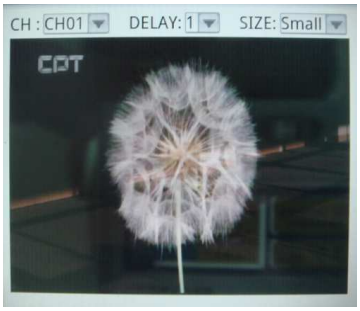

Channel: Channel selection.
Display Delay: Display Delay selection.
SIZE: Display size selection.

■ 3G MOBILE SUPPORT LIST

Brand	Model Number	System
HTC	HD mini T5555	Windows Mobile 6.5
HTC	P3700	Windows Mobile 6.1
HTC	Desire HD A9191	Android 2.2
Nokia	5800XpressMusic	S60
Motorola	XT701	Android 2.1

10. H264Player Operation

- Preface
  H264Player software allows to playback the backup saving file from the DVR.
- System Requirement
  Operating System: Windows 2000, XP, Vista, Windows 7.
- Program obtainment and installation
  While user start to backup the file from DVR, the system will automatically copy the H264Player.exe file and recorded data to the backup device for example, an USB flash memory stick.
  - Execute the installation file

    Step 1: Ask for the Installation

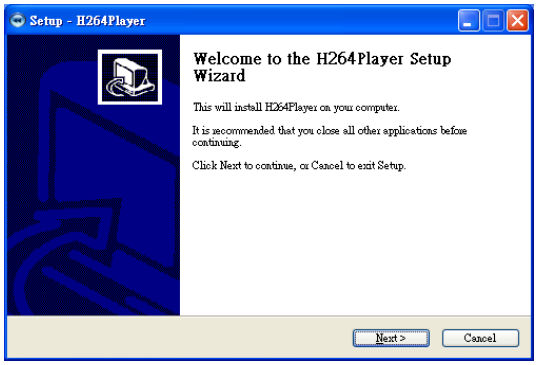
Setup - H264Player
Welcome to the H264Player Setup Wizard
This will install H264Player on your computer.
It is recommended that you close all other applications before continuing.
Click Next to continue, or Cancel to exit Setup.
Next >
Cancel

    Step 2: Select the Install Location

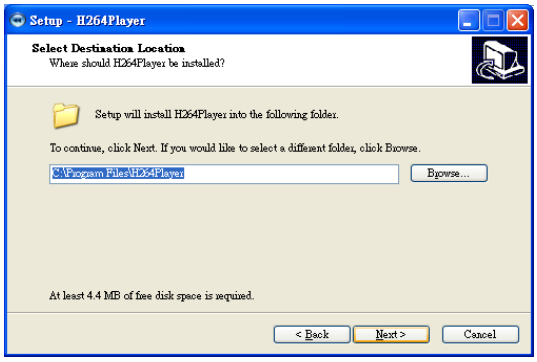
Setup - H264Player
Select Destination Location
Where should H264Player be installed?
Setup will install H264Player into the following folder.
To continue, click Next. If you would like to select a different folder, click Browse.
C:\Program Files\H264Player
Browse...
At least 4.4 MB of free disk space is required.
< Back
Next >
Cancel

    Step 3: Select Additional Tasks

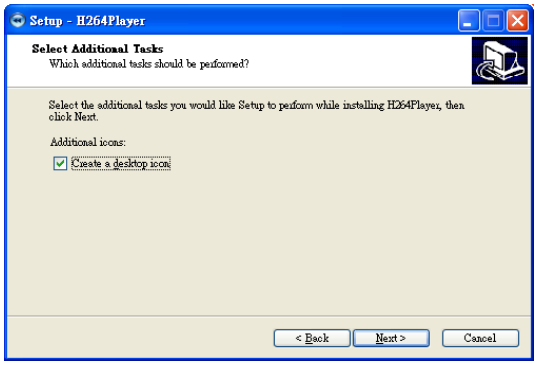
Setup - H264Player
Select Additional Tasks
Which additional tasks should be performed?
Select the additional tasks you would like Setup to perform while installing H264Player, then click Next.
Additional icons:
Create a desktop icon
< Back
Next >
Cancel

Step4: Install Confirmation

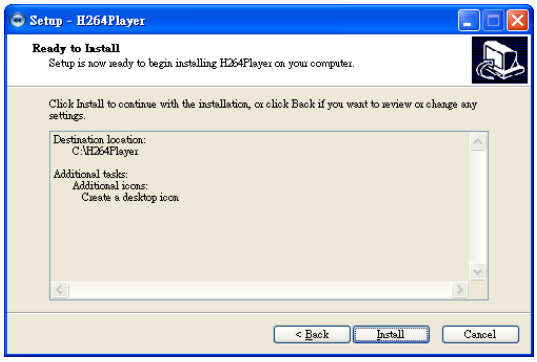
Setup - H264Player
Ready to Install
Setup is now ready to begin installing H264Player on your computer.
Click Install to continue with the installation, or click Back if you want to review or change any settings.
Destination location:
C:\H264Player
Additional tasks:
Additional icons:
Create a desktop icon
< Back
Install
Cancel

Step 5: Installation Complete

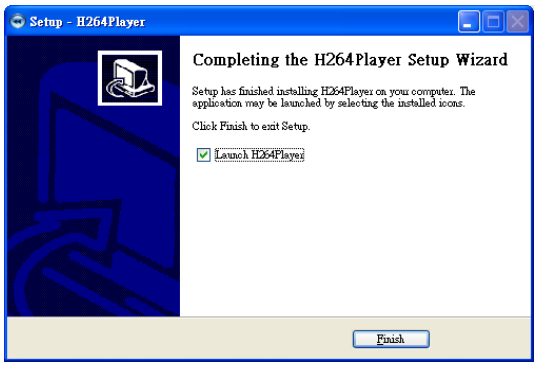
Setup - H264Player
Completing the H264Player Setup Wizard
Setup has finished installing H264Player on your computer. The application may be launched by selecting the installed icons.
Click Finish to exit Setup.
Launch H264Player
Finish

◆ User Interface

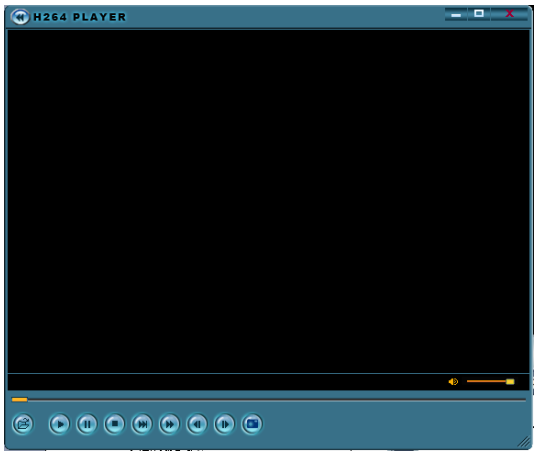

Open File	Click
Pause	Click
Stop	Click
Play 1x	Click
Fast Forward	Click
Slow Forward	Click
Capture the image (snap shot) to the host computer	Click
Volume Control	Drag

Rewind	Click
Step Forward	Click
Pop-up Menu	Right click the mouse to open the pop-up menu including Setting, Language, About H264Player, Exit 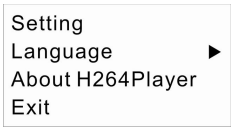

11. Web Operation

- Preface
  The Web Application Manager allows the user to remotely monitoring, playback, backup through the DVR.
- System Requirement
  Operating System: Windows 2000, XP, Vista, Windows 7
  Web Browser: Internet Explorer
- Add-on Installation
  Please use the IE browser to login the IP address of DVR setting. If the user is the first time to login the page, the system will ask the user to download and install the add-on as you can see the page below. Please click the request to install the ActiveX add-on.

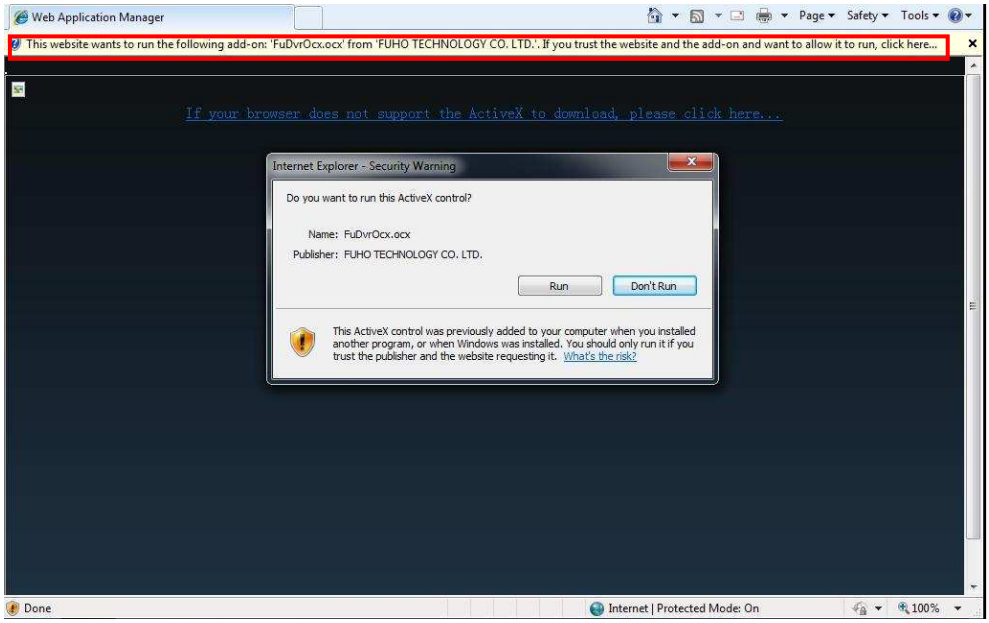
Web Application Manager
This website wants to run the following add-on: 'FuDvrOcx.ocx' from 'FUHO TECHNOLOGY CO. LTD.'. If you trust the website and the add-on and want to allow it to run, click here...
If your browser does not support the ActiveX to download, please click here...
Internet Explorer - Security Warning
Do you want to run this ActiveX control?
Name: FuDvrOcx.ocx
Publisher: FUHO TECHNOLOGY CO. LTD.
Run
Don't Run
This ActiveX control was previously added to your computer when you installed another program, or when Windows was installed. You should only run it if you trust the publisher and the website requesting it. What's the risk?
Done
Internet | Protected Mode: On
100%

- User Interface
  - Login Page

Please login user name and password from the setting of DVR end.

- Live mode

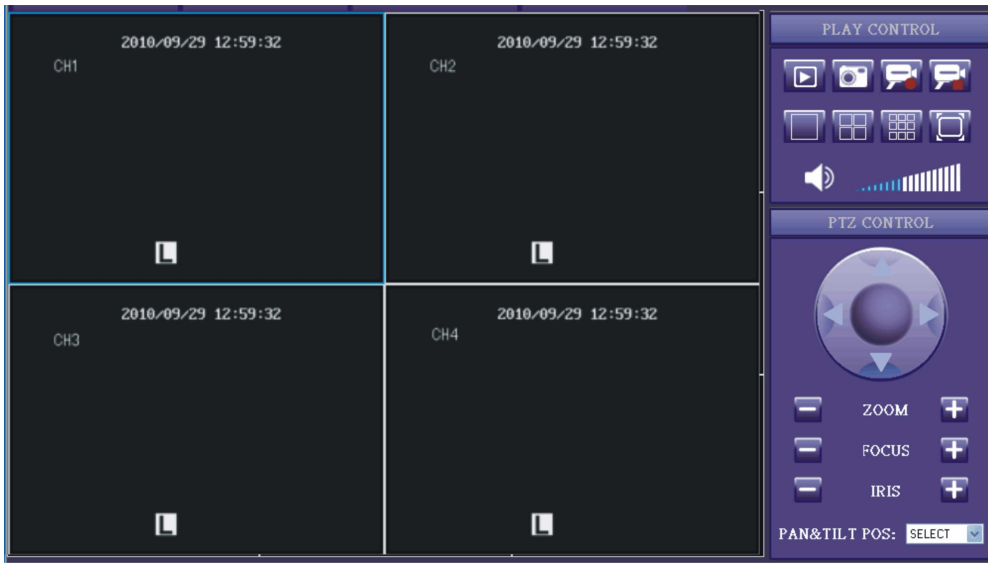

Start/Stop the Live Monitoring	Click
Record the Footage to Computer	Click Start recording or Stop recording (saving path: Setup/Information)
Snapshot the Image	Click to snap shot the image (saving path: Setup/Information)
Enable/Disable Audio	Click under the live viewing mode to enable the audio, and click to disable
Volume Control	Click
Switch Channel Display	Double click the channel to enter single channel display, double click again to return.
Single/4/8 Display	Click
Speed Dome Preset Point	
PTZ Control	Please refer “PTZ” for more information

◆ Playback

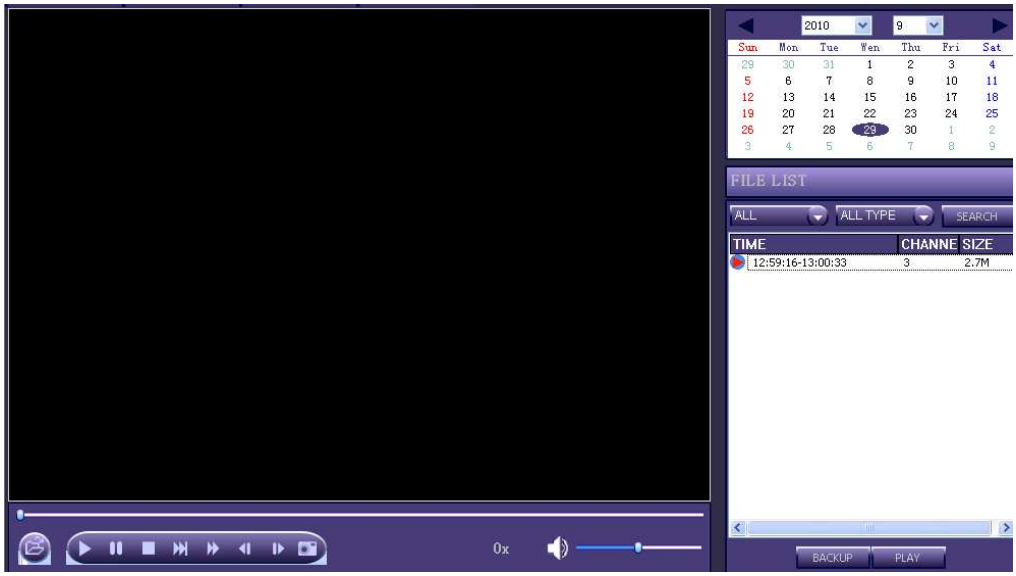

Event Search	(1) Select Date (2)Click ALL or ALL TYPE (3)Click SEARCH
Playback	Click on pop up file list
Fast Forward	Click “Fast Forward” (Speed: 2X, 4X, 8X, 16X)
Rewind	Click “ Rewind” (Speed: 1/2, 1/ 4X, 1/ 8X, 1/ 16X)
Step Forward	Click “Previous”or “Step”
Snapshot	Click to capture.
Backup	Click “Backup”, backup path: Setup→ System Setting→ Backup Location

◆ DVR Setting

‣ Cameras

Please refer “Camera Setup” for more information

- Record

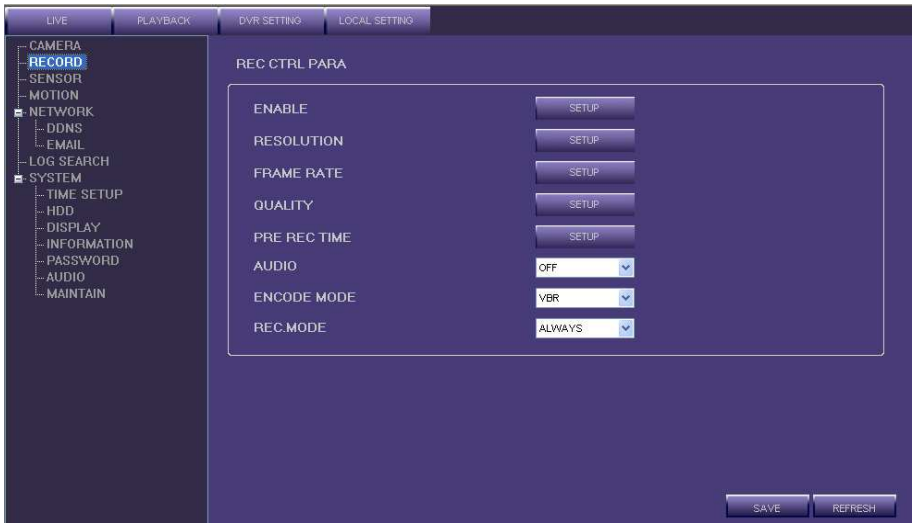

Please refer “Record Setup” for more information.

- Alarm

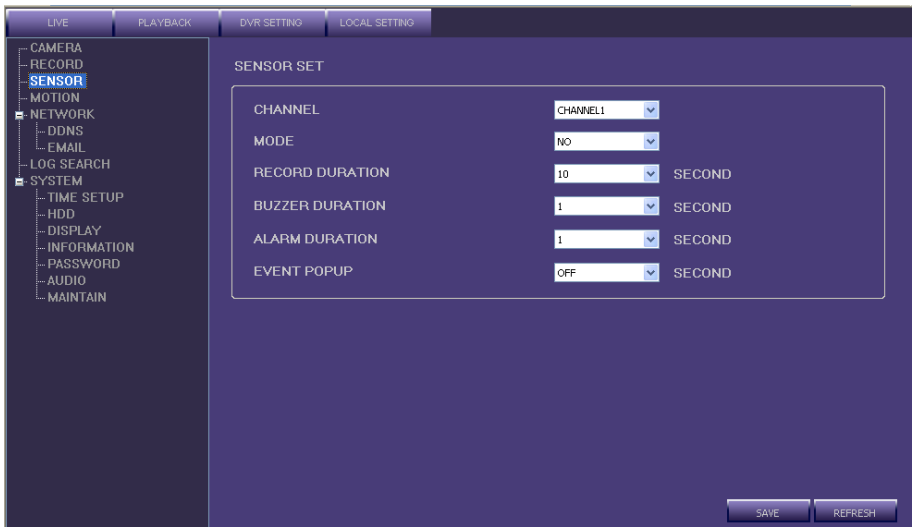

Please refer “Alarm Setup” for more information.

- MotionDetection

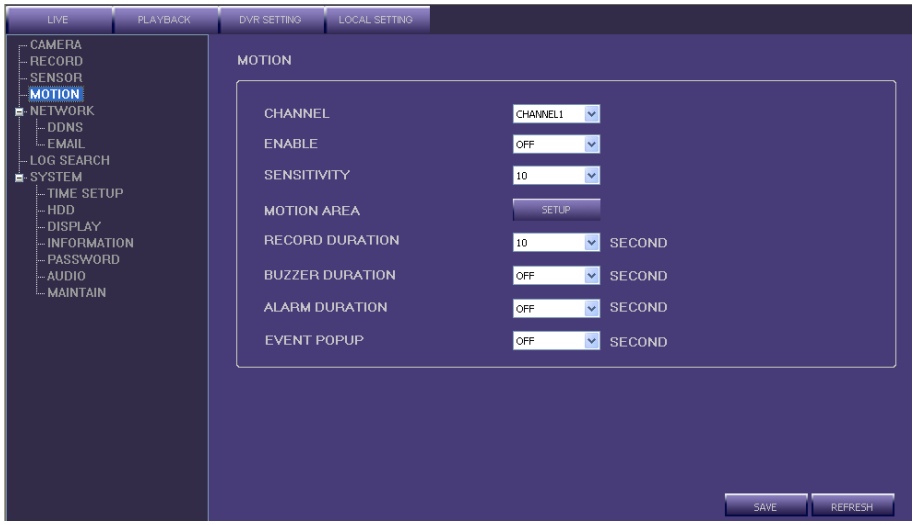

Please refer “Motion Detection” for more information.

- Network setting

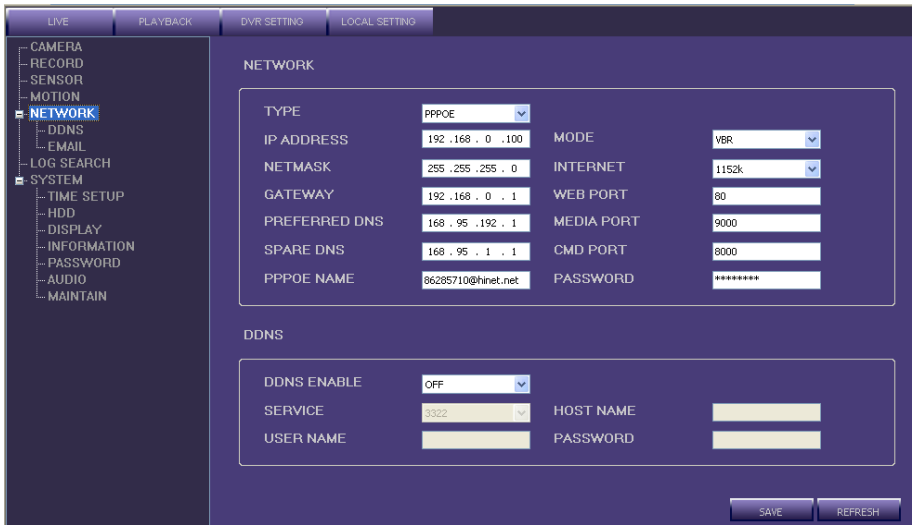

E-MAIL

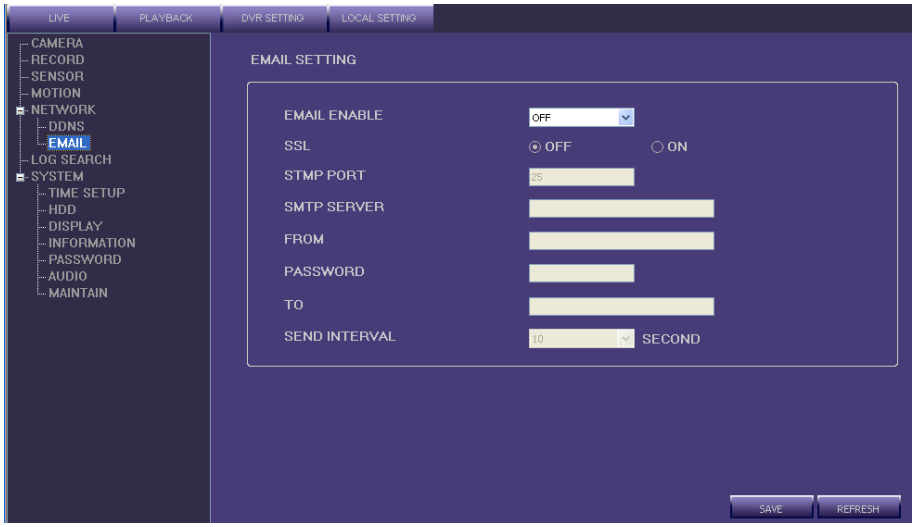

- Log search

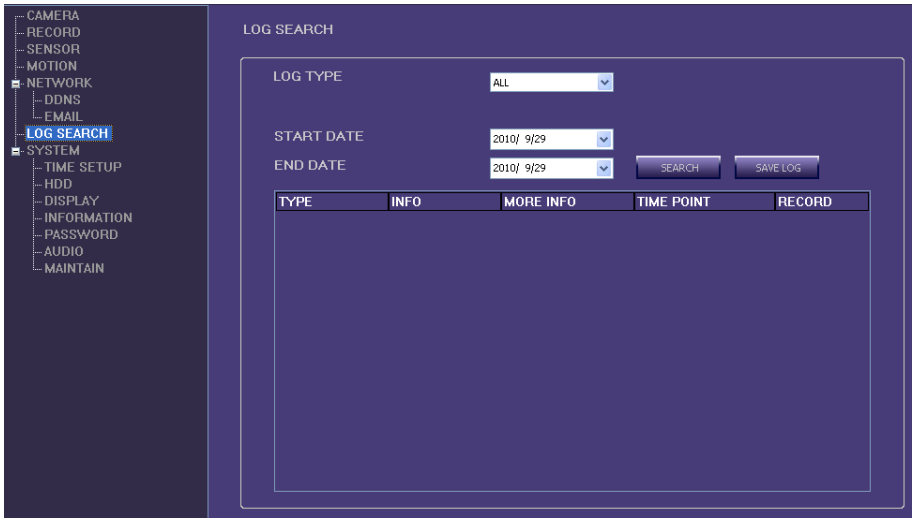

◆ System Setting

‣ Date/Time Setting

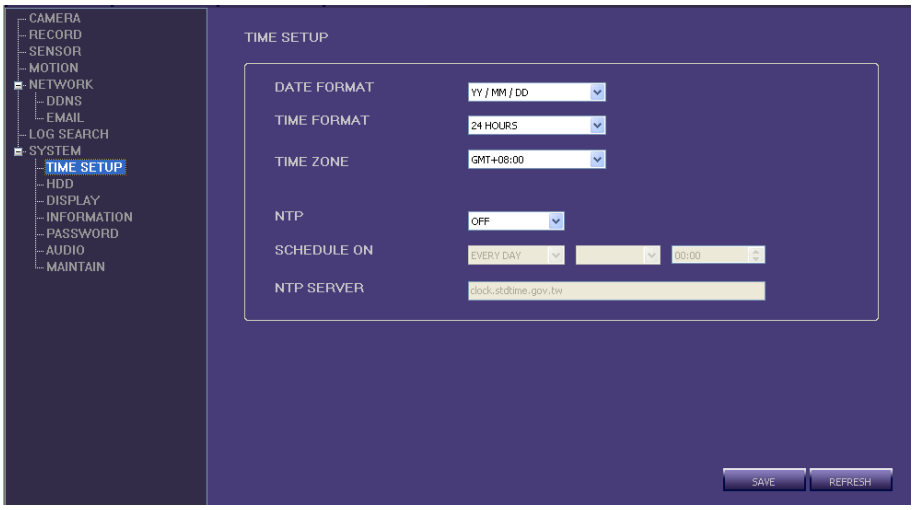

‣ HDD Management

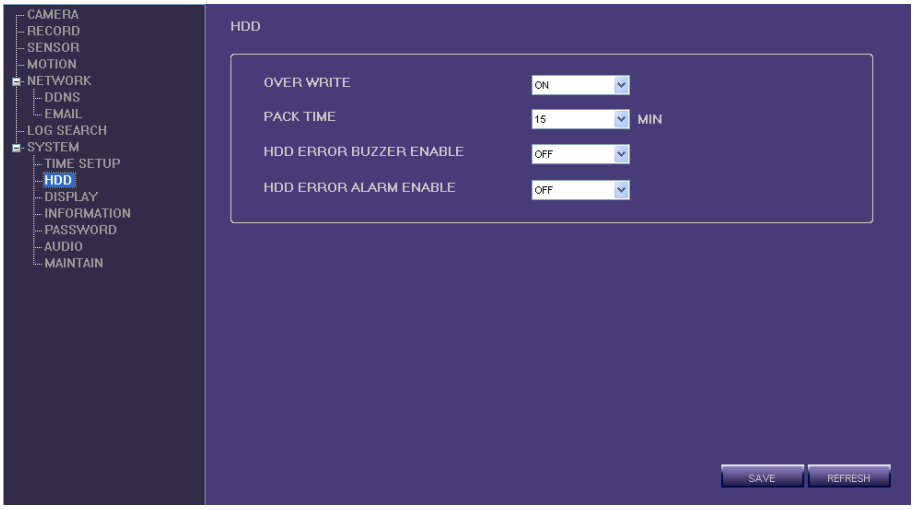

‣ Display

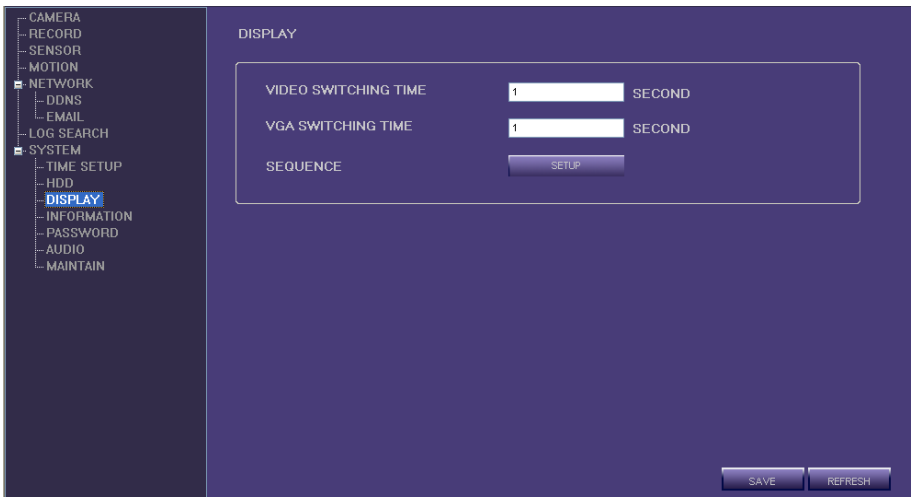

- System Information

- Account/password

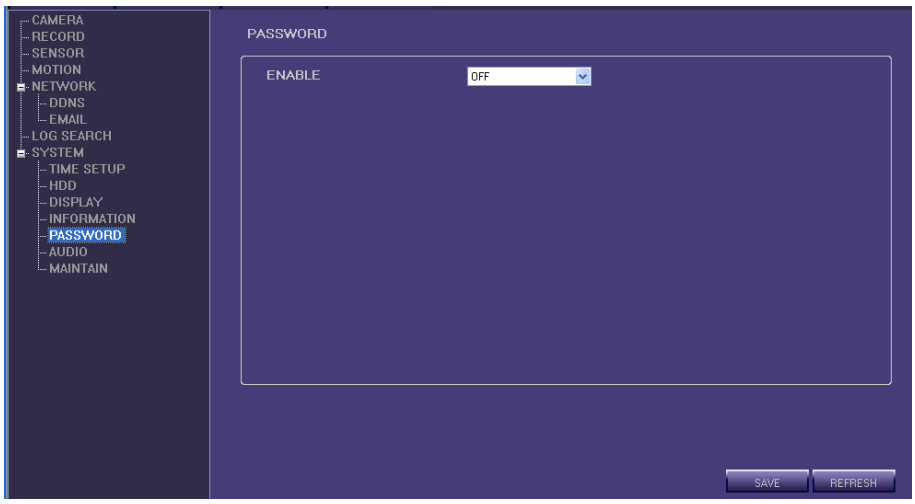

- Audio Setting

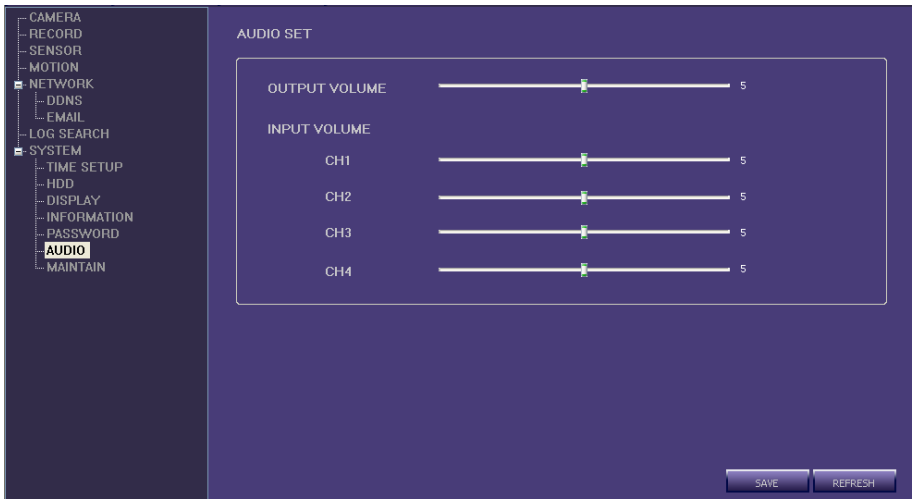

- System Maintenance

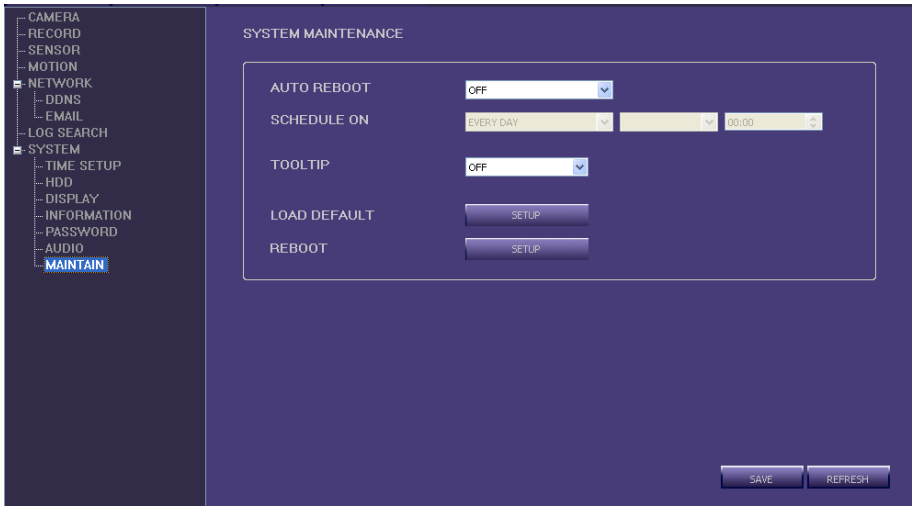

◆ Host setting

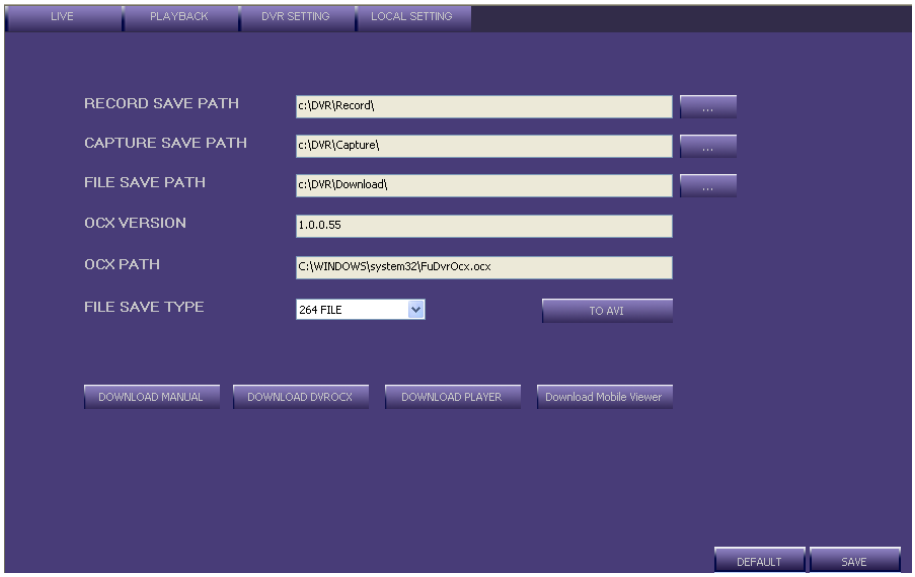

12. Default Setting

Item		Default Setting	Item		Default Setting
Record Setup	Channel	On	**HDD Setup**	Overwrite	Yes
	Resolution	Normal		Pack Time	60 Mins
	Frame Rate	Real-time	**Time Setup**	Date Format	YY/MM/DD
	Quality	Highest		Time Format	24 Hours
	Audio	Disable		Time Zone	GMT+08:00
	Schedule	Always		Daylight Saving	Off
Camera Setup	Channel 1	CH1	**XGA/Audio Setup**	XGA Resolution	800 X 600
	Channel 2	CH2		Output Volume	5
	Channel 3	CH3		Input Volume	5
	Channel 4	CH4	**Alarm Setup**	Mode	On
	Title Position	Top Left		HDD Loss	On
	Display	On		HDD NO SPACE	On
	Display Time	On		Video Loss	On
	Switching Time	1 sec.		Alarm Output	1 sec.
Camera Color Setup	Hue	25		Post REC	10 sec.
	Brightness	25		Buzzer	1 sec.
	Contrast	25	**E-MAIL Setup**	E-MAIL	Off
	Saturation	25	**System Maintenance**	Maintenance Schedule Setup	Off
Motion Detection	Channel Status	Off	**PTZ**	Type	Off
	Sensitivity	5		Protocol	Off
Network Setup	Mode	Static IP		Address	001
	Media Port	09000		Baud Rate	9600
	Web Port	00080		Tour Time	Off
	IP Address	192.168.000.100		Tilt Opposite	Off
	NetMask	255.255.255.0			
	Gateway	192.168.000.001			
	DNS	168.095.001.001			
DDNS Setup	DDNS	Off			

13. USB Flash Memory Stick Support List

The following recommended flash drives have passed all testing procedures and are safe to a: backup, b: Playback by PC, and c: update firmware.

Brand	Model Number	Capacity
Transcend	Jetflash V20	4G
	Jetflash V20	8G
	Jetflash V30	16G
	Jetflash V20	32G
Adata	PD1	1G
	PD1	4G
	PD1	8G
	C801	16G
	C801	32G
SONY	Microvault	8G
	Microvault	16G
SanDisk	Cruzer Micro	4G
	Cruzer Micro	8G
	Cruzer Micro	16G
Kingston	DTIG2	4G
	DTIG2	8G
	DTIG2	16G